


RP15608 - INSTALLATION INSTRUCTIONS

UPPER CONTROL ARM BUSHINGS

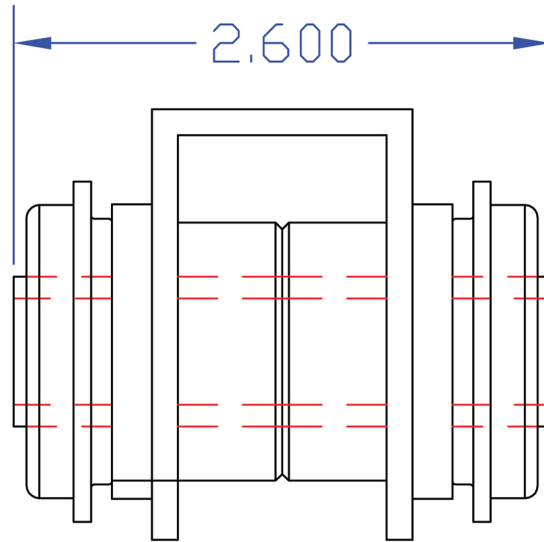

NOTE: A gap will exist between the flange on the bushing and the arm. The step on the bushing is the stop. Do not over-press.